



Weather Tracker - Downloading Data Guide

Step 1 Connecting up

- Have ready the **Weather Tracker**, cradle, serial lead and optional serial/USB adaptor.
- Connect the serial lead to the cradle.

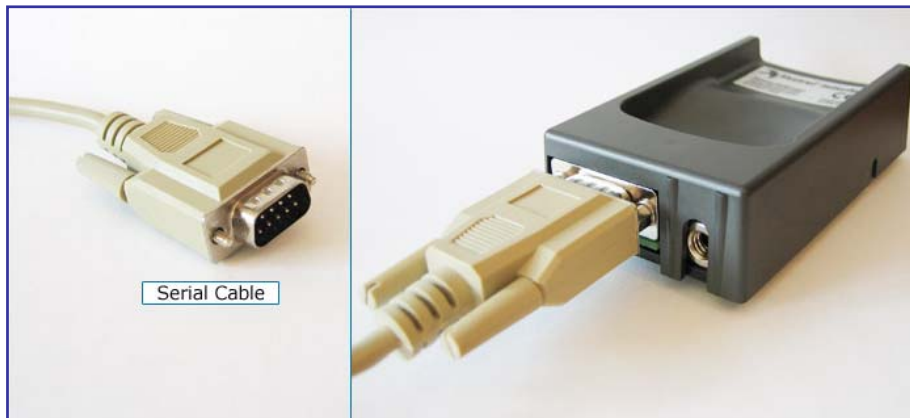

- Connect the other end of the serial lead to the serial port on your computer

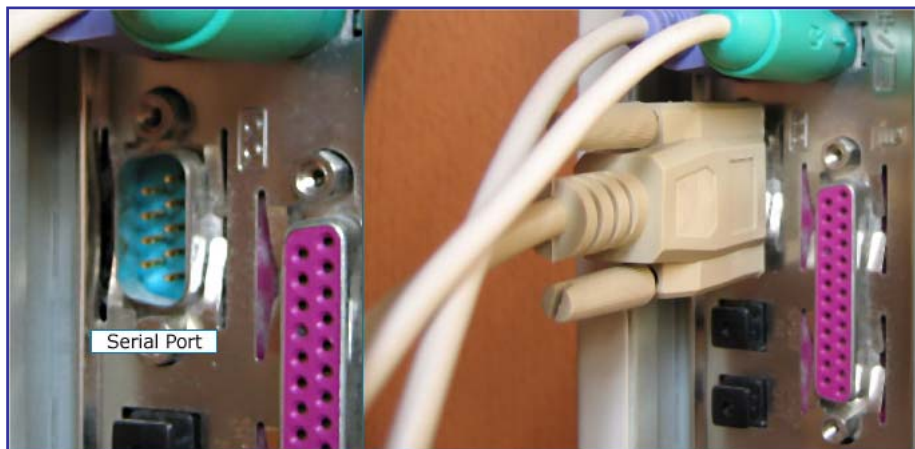

OR Connect the optional serial/USB adaptor, which is plugged into the USB port.)



You may get a message 'Found new hardware wizard' when you plug the USB adaptor in, Ignore this on Windows XP, but you will need to install the USB adaptor software on other computers.

- Place the Weather Tracker in the cradle and switch it on.



Step 2 Testing the connection


- Load the **Weather Tracker** program.
- Choose the menu option: [Setting up the Weather Tracker](#)
- You will need to identify the serial (Com) port to which your Weather Tracker is connected. Select a Com port from the drop down list and click on 'Check connection'.



If you have chosen the correct port the message: *'The Weather Tracker is connected to your computer'* will appear. If not, then select another Com port and try again. The correct Com port will be written into the 'ini' file, so you will not have to go through this process again if you connect to the same computer.

Note here about networks.

- You can also choose which measurements you wish to see on the screen, although all of them will be downloaded.

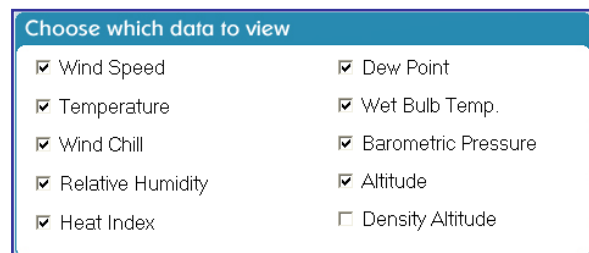

- Click [« Menu](#) when you have finished setting up the Weather Tracker.

Step 3 Downloading data

- You can now choose: [Get data from Weather Tracker](#)

The data will be transferred to your computer and you will see a running total in the information box. When all the data has been downloaded, the **Summary** screen with average, maximum and minimum will appear for all the measurements you have selected.

- Click [View Data »](#) to see graphs of the downloaded weather data.